

PRODUCT SIZE	<b>150 CM</b>
MAX SLIDING LENGHT	<b>146 CM</b>
MAX LOADING WEIGHT HORIZONTAL	<b>3 KG</b>
MAX LOADING WEIGHT VERTICAL	<b>0,5 KG</b>
SLOWEST SPEED	<b>4,45 CM/SEC</b>
FASTEST SPEED	<b>18 CM/SEC</b>

# ACCURIZE SLIDER

## User Manual



[WWW.ACCURIZETARGET.COM](http://WWW.ACCURIZETARGET.COM)

 


# User Manual Accurize Slider



## PACKING LIST

Slider / USB connecting cable / DC connecting cable for controller & battery / controller / lithium battery / battery-charger 220V and portable bag.

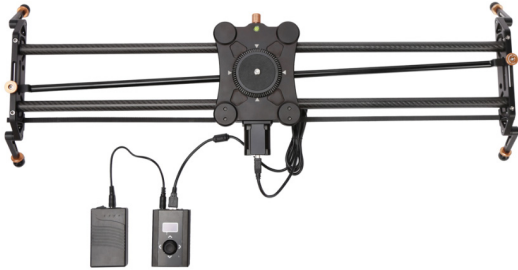

## BATTERY CHARGE

Charge the battery to full before using the slider

- Connect the charger to the battery, use the second hole from the switch
  - Connect the charger to the main power
  - Turn the battery switch in position on
- 220V battery charger shows red lamp – Full charged battery, lamp turn green.  
Battery will work for approx. 2,5 hours.

## CONNECTION

- Connect battery and controller with the DC connecting cable.
- Use the hole closest to the switch of the battery.
- Connect controller and electric motor with the USB cable
  - Turn on the battery switch and the display screen on the controller will turn on

## CONTROLLER SET UP AND USE

### Main menu

- Moving mode
- Time lapse
- Set Start /End

### IMPORTANT!

Move in the menu by using joystick up /down left/right  
Choose menu by pressing joystick down  
Back to main menu by pressing joystick down for 2 sec.

## STEP 1. SET START/END MENU

Go to set start/end in the menu, press the mid of the joystick

### Choose start

Slide the wagon by moving joystick left /right and press mid of joystick for set start point. Press mid of joystick again for moving to set end point.

### Choose end

Set End point for the wagon by moving joystick left/right and the wagon will start moving. When the wagon are in the end of the slider, or in the point where you want to set as the end point. Then press mid of the joystick again. End point is set. Press mid of the joystick to get back to main menu.

**Notice!** Under set start/end menu its also possible to change the wagons speed approach in each end. This feature provides a more comfortable approach to start/end position.  
Set approach by moving joystick left/right.

## STEP 2. MOVING MODE

Choose moving mode in the menu by pressing the mid of the joystick

Choose manual or auto mode by pressing the mid of the joystick

If you choose manual, you can change speed and direction.

Move joystick left/right to start wagon.

If you choose auto mode, you can choose auto loop and the wagon will go both way automatic or choose one way stop and the wagon will stop in the set end point.

Choose autoloop and you can change speed of the wagon and direction.

For change of speed; move joystick up/down.

For changing direction; move joystick left/right.

## STEP 3. TIME LAPSE

Choose time lapse in the main menu. Minimum total time is 2 minute.

It's possible to set total working time for the slider. If you set total working time 120 sec, it will use 120 sec. from set start point to set end point. By moving joystick down, you can set number of stop for the wagon as part of the total time.

**Example:** By choosing total time 60 sec and setting 10 stop, the wagon will stop 10 times between set start and set end point.

By moving joystick down one more step, you can choose autoloop yes/no.

This need to be in position **YES** if you want the slider to move automatic from side to side and total time will restart when end point is reached.