

---

# ACCURIZE

www.accurizetarget.com

---



**Warning !**  
Avoid direct eye exposure  
Laser light . Keep away from  
children.

---

---

## USER MANUAL LASER ACOUSTIC MODEL

---

- 1. Never look directly at the laser. Never direct it to other people or animals. The laser can damage the eye.**
2. Align the laser at a wall, ceiling or floor.
3. Hold the black button for about 1,5 sec, one flash of light should appear on the wall, the ceiling or the floor. (Not only tap the black button, but hold it for 1,5 sec)
4. **Check that the firearm is not charged with ammunition.**
5. **Check that the firearm is in dry fire mode if using air rifle/pistol. DO NOT OPEN THE AIR VALVE.**
6. The laser pin is inserted into the barrel from the mouth of the weapon until it is physically stopped. If it goes very tight, lubricate a little gun oil on the o-rings.
7. The laser is now ready to be used and will send laser shots to the target by pull-out, and at charge grips carried out after the time limit, NB! **see bottom.**
8. Press the black button 5-6 sec and 5 quick flashes of light should be observed on the floor, ceiling or wall. **The laser is then turned off.**
9. The laser should **ALWAYS** be removed from the firearm after use. Do not forget it before using sharp ammunition.

### Replacing the Battery

Battery Mod. CRI620 can be purchased from your dealer and replaced by turning the laser top apart. Gently push the battery out by pressing a thin object on the back of the battery.

### **NB! The laser will fire after the sound from the firing pin**

- **The laser will fire again when you pull back the bolt – if you don't do it before 1,2 sec.**
- **If you do it before 1.2 second the laser will not fire before the firing pin hit again.**

**Information to those who use the Accurize shooting system : If you want more delay to do the “pull back bolt action” - use the inhibit function in the app itself.**

---

