

---

# ACCURIZE

---



**Warning !**  
Avoid direct eye exposure  
Laser light . Keep away from  
children.

---

## USER MANUAL LASER ACOUSTIC MODEL

---

- 1. Never look directly at the laser. Never direct it to other people or animals. The laser can damage the eye.**
2. Align the laser at a wall, ceiling or floor.
3. Press in the black button for about 1 sec, one flash of light should appear on the wall, the ceiling or the floor. When light flashes are observed, the laser is turned on and ready for use.
- 4. Check that the firearm is not charged with ammunition.**
- 5. Check that the firearm is in dry fire mode if using air rifle/pistol. DO NOT OPEN THE AIR VALVE.**
6. The laser pin is inserted into the barrel from the mouth of the weapon until it is physically stopped. If it goes very tight, lubricate a little gun oil on the o-rings.
7. The laser is now ready to be used and will send laser shots to the target by pull-out, and at charge grips carried out after the time limit, **see NB! bottom.**
8. For calibration on the biathlon target, use the center target.
9. Press in black button 3- 5 sec and 5 quick flashes of light should be observed on the floor, ceiling or wall. **The laser is then turned off.**
10. The laser should **ALWAYS** be removed from the firearm after use. Do not forget it before using sharp ammunition.

### Replacing the Battery

Battery can be purchased from your dealer and replaced by turning the laser top apart. Gently push the battery out by pressing a thin object on the back of the battery.

### **NB! The laser will fire after the sound from the firing pin**

- **The laser will fire again when you pull back the bolt – if you don't do it before 1,2 sec.**
- **If you do it before 1.2 second the laser will not fire before the firing pin hit again.**
- 

**If you want more delay to do the“pull back bolt action” - use the inhibit function in the app itself.**

---

